

POWERFLEX®

PART NUMBER

PFR19-207

DESCRIPTION

REAR INNER WISHBONE BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- 2 x Polyurethane A Bushes
- 1 x PTFE/Silicone Grease
- 2 x Polyurethane B Bushes
- 2 x Stainless Steel Sleeves
- 2 x Polyurethane C Bushes

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the original rubber bush from the rear wishbone.
2. Clean any dirt and corrosion from the wishbone, and file off any sharp edges.
3. Push the polyurethane part C into the centre of the wishbone arm, as shown in figure 1. Ensure that the bore lines up with both holes in the wishbone.
4. Push the polyurethane part A with the smaller diameter into the smaller bore of the wishbone.
5. Push the polyurethane part B into the opposite side of the wishbone, with the larger diameter.
6. Apply the supplied grease to the bore of the polyurethane parts and insert the stainless steel sleeve until it sits flush within the bush.
7. Tension all hardware to manufacturers recommended torque settings.

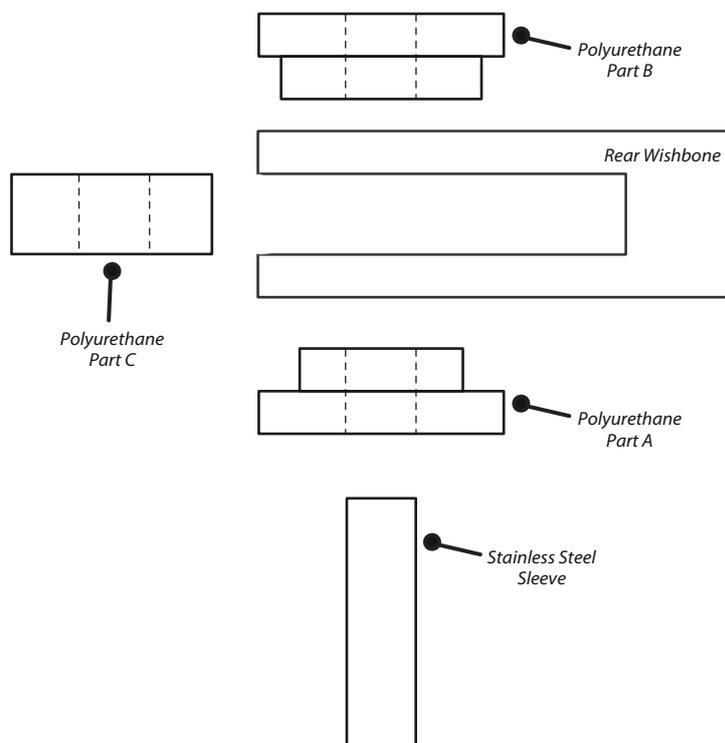


Figure 1